




WASHER/DRYER CONTROL PANEL PARTS

For Models: LTG5243DQ4, LTG5243DT4

(Designer White) (Biscuit)

WASHER/DRYER
LAUNDRY SYSTEM

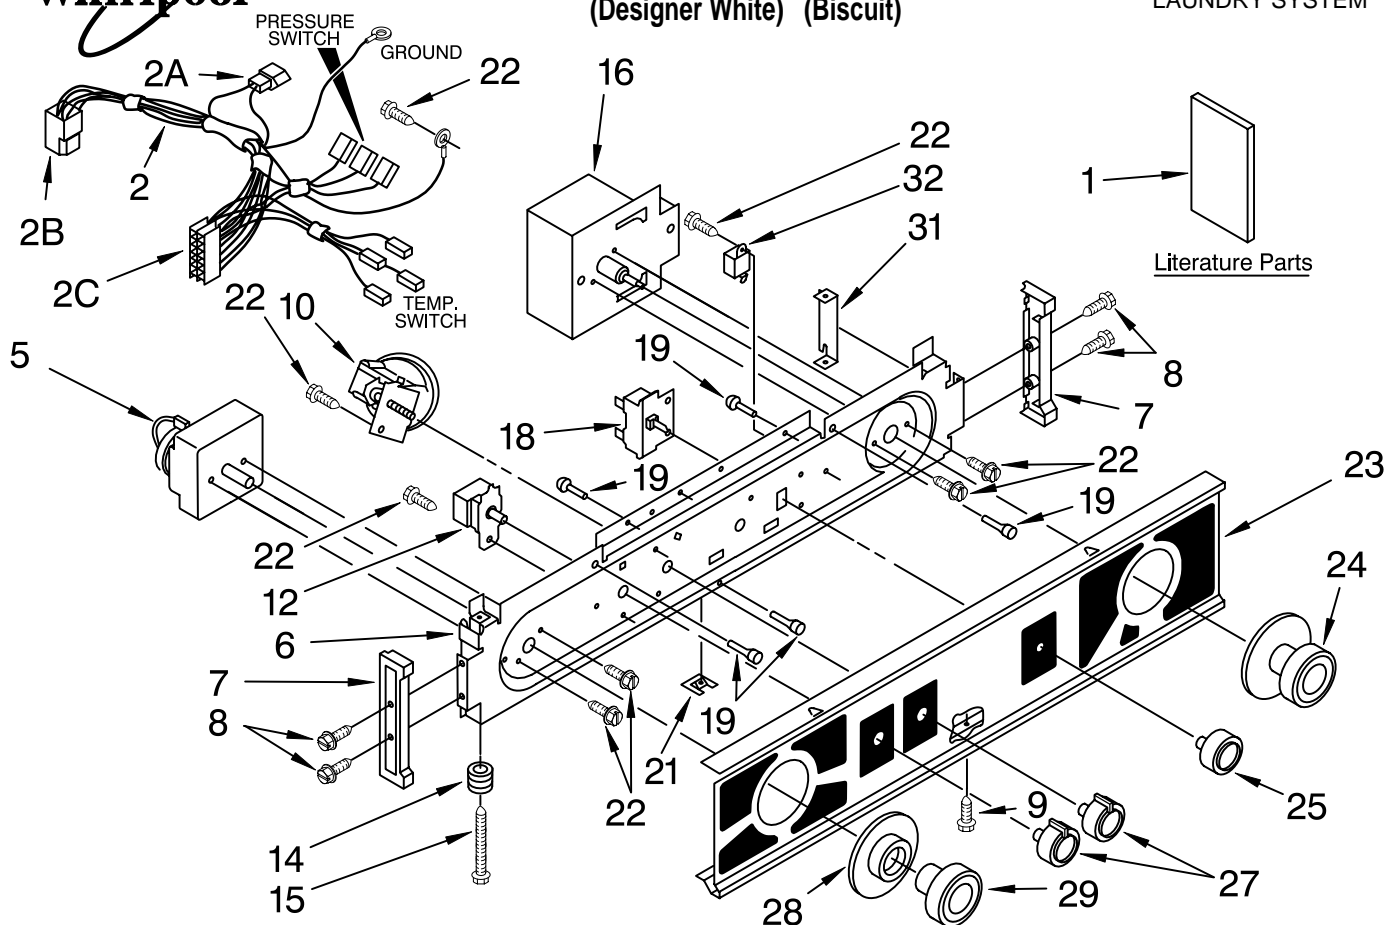

Illus. No.	Part No.	DESCRIPTION
1	8562591	Literature Parts
	3406880	Installation Instructions
	8542754	Use & Care Guide Sheet, Cycle Feature
	3952875	Wiring Diagram
	3954159	Energy Guide
2	3406288	Harness, Console Wiring (Automatic) (Includes Illus. 2A, 2B & 2C)
2A	3350130	Plug, Terminal (2-Way) (Connects With Main Dryer Harness)
2B	696073	Receptacle, Connector (Connects With Lower Automatic Harness)
2C	3948614	Disconnect Block (Connects With Automatic Timer)

Illus. No.	Part No.	DESCRIPTION
5	3952499	Timer, Control (60 Hz.) (Automatic Washer)
6	8528154	Bracket, Control
7	692993	End Cap, Console (L.H. & R.H.)
	3978584	White Biscuit
8	348689	Screw, 8-18 x 3/4
9	694091	Screw, 8-18 x 3/8
10	3362987	Switch, Water Level
12	8054142	Switch, Water Temperature
14	693151	Spring, Console Lock (2)
15	3400860	Screw, Console Lock (2)
16	3406720	Timer, Control (60 Hz.) (Dryer) (Timer Motor Not Serviceable)
18	3977456	Switch, Push-To-Start
19	693152	Bumper, Console (5)


Illus. No.	Part No.	DESCRIPTION
21	694037	Clip, Console
22	3390646	Screw, (8-18 x 5/16)
23	3977194	White Panel, Control
	3977195	Biscuit
24	3406143	Knob, Timer (Dryer)
	3978872	White Biscuit
25	3406133	Knob, Push-To-Start
	3978871	White Biscuit
27	3950759	Knob, Control (2)
	3978873	White Biscuit
28	3950762	Dial, Timer (Washer)
	3978870	White Biscuit
29	3951026	Knob, Timer (Washer)
	3978869	White Biscuit
31	692983	Lock, Console (2)
32	694419	Buzzer

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

DRYER FRONT PANEL AND DOOR PARTS

For Models: LTG5243DQ4, LTG5243DT4

(Designer White) (Biscuit)

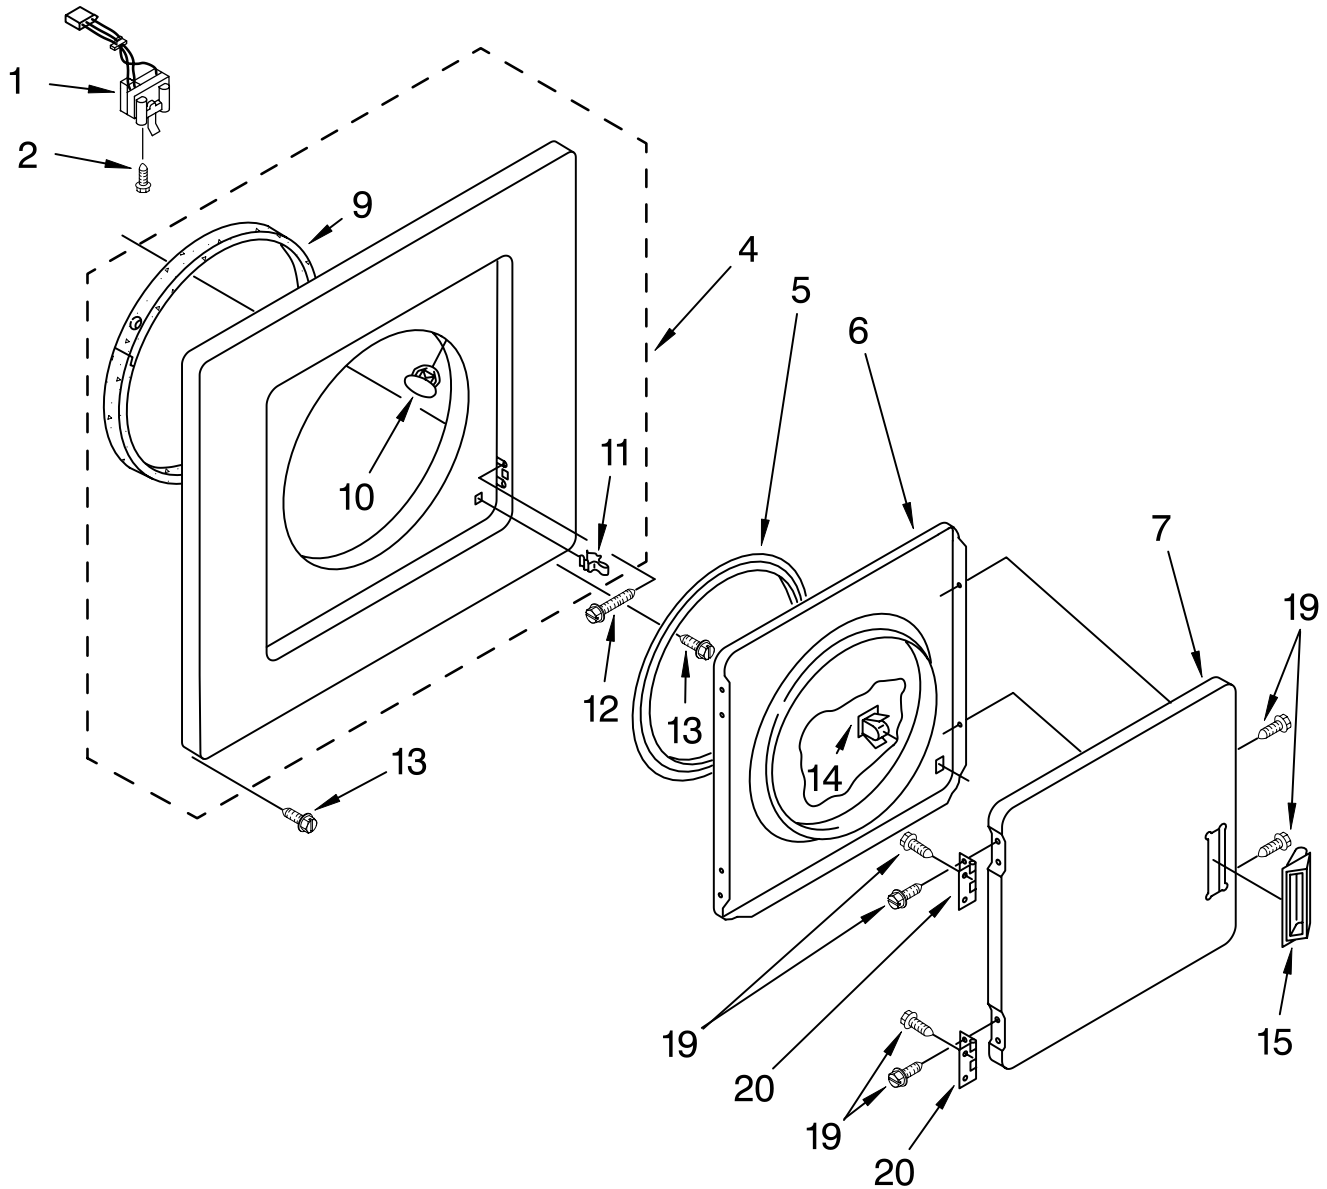

Illus. No.	Part No.	DESCRIPTION
1	3406108	Door Switch
2	697773	Screw, 6-20 x 7/8
4	692619	White
	3978587	Biscuit
5	3390734	Seal, Door
6	695656	Door, Rear

Illus. No.	Part No.	DESCRIPTION
7	348205	Door, Front
	3978598	Biscuit
9	8066123	Bearing & Seal
10	685203	Clip, Felt Pad (2)
11	696144	Strike, Panel
12	3390663	Screw, 10-16 x 1/2


Illus. No.	Part No.	DESCRIPTION
13	343641	Screw, 10-16 x 1/2
14	3389441	Catch, Door
15	686711	White
	3978592	Biscuit
19	694091	Screw, 8-18 x 3/8
20	348023	Hinge & Pin, Door (2)

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

DRYER CABINET AND MOTOR PARTS

For Models: LTG5243DQ4, LTG5243DT4

(Designer White) (Biscuit)

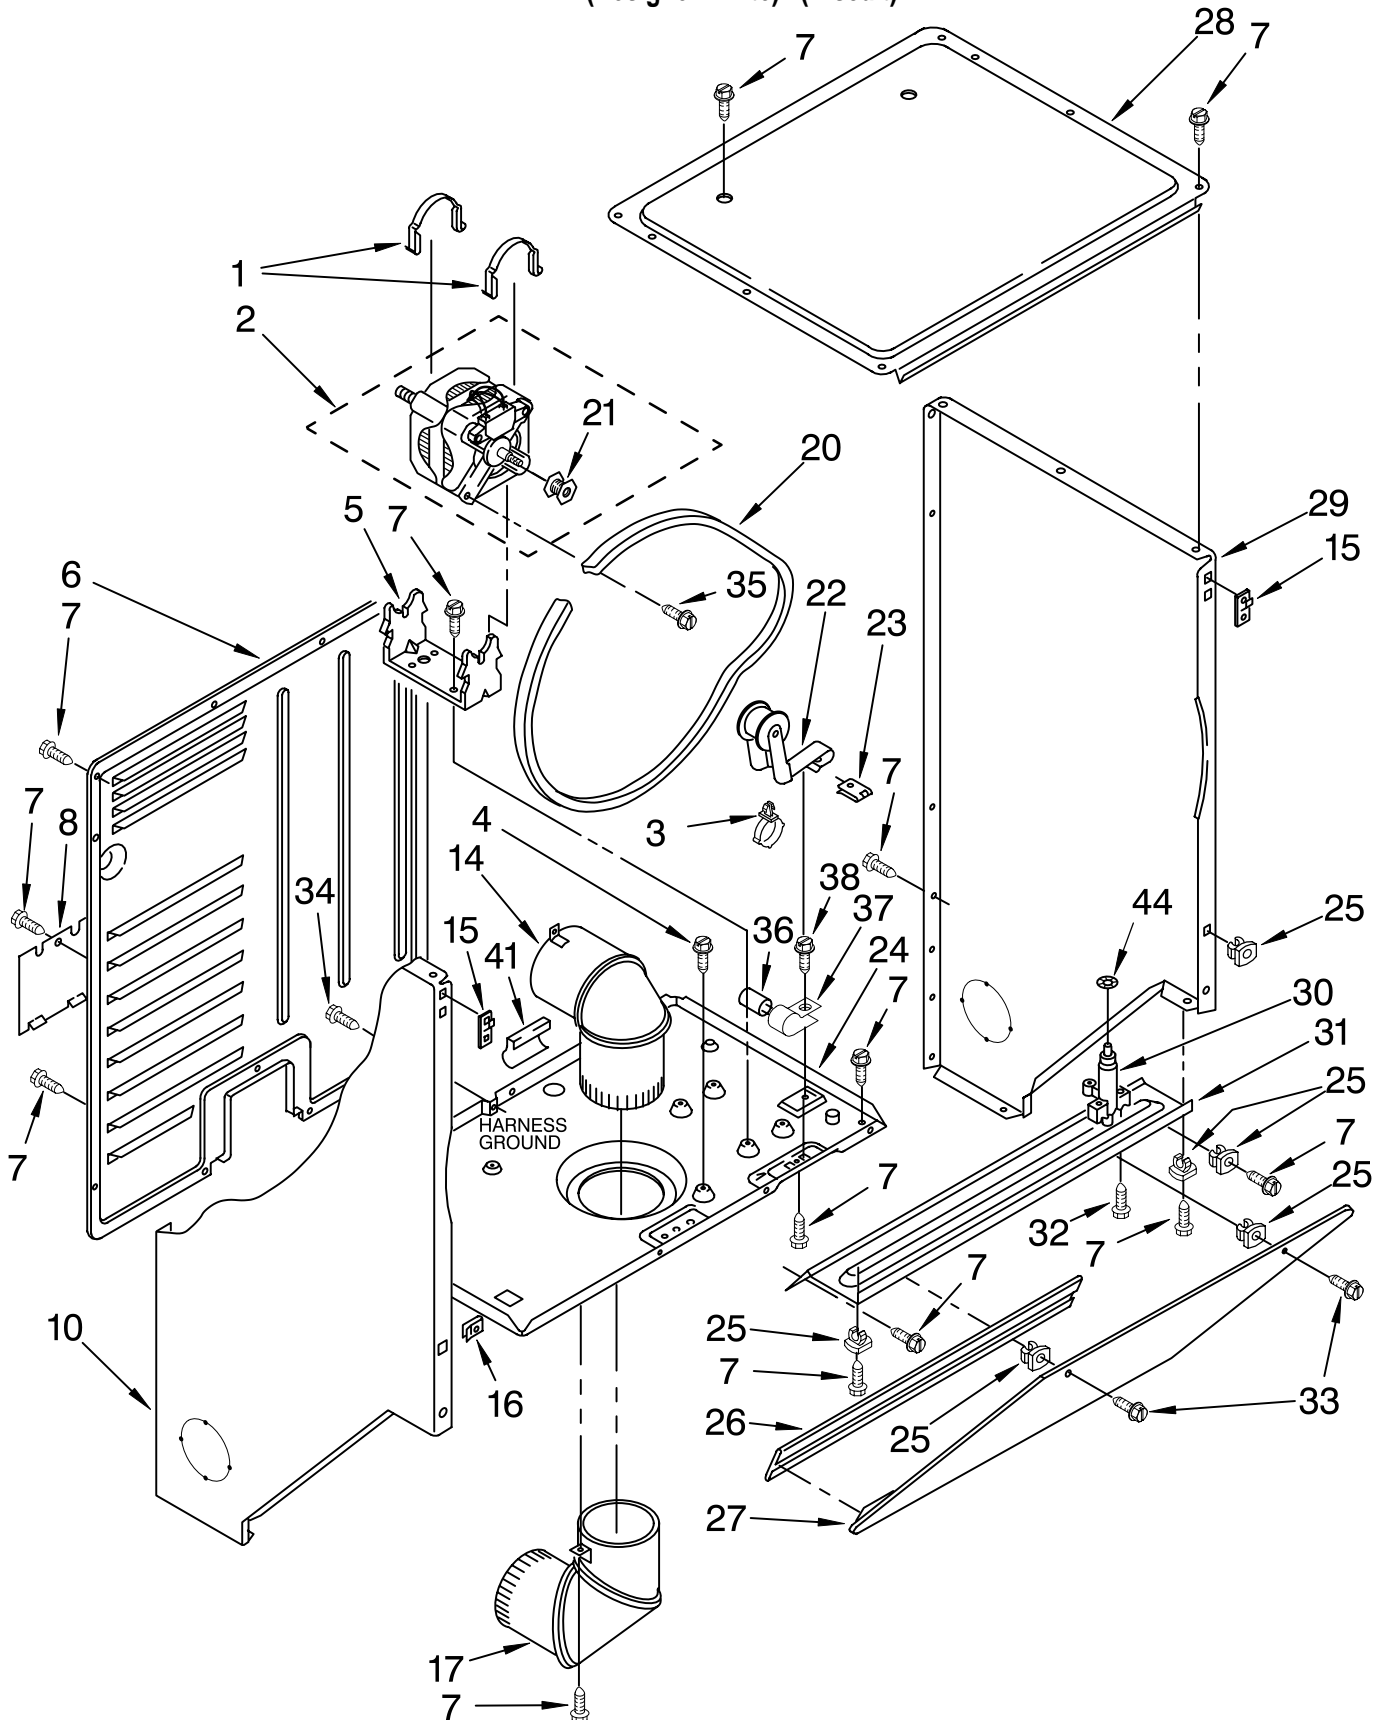

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

DRYER CABINET AND MOTOR PARTS

For Models: LTG5243DQ4, LTG5243DT4


(Designer White) (Biscuit)

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1	660658	Clamp, Motor Mounting (2)	21	8066051	Pulley, Motor (60 Hz.)	31		Closure, Control Area
2	8538265	Motor, Main Drive (60 Hz.)	22	691366	Idler & Pulley Assembly		692781	White
3	3352501	Clip	23	692771	Nut, Idler Bracket To Base	32	3978599	Biscuit
4	3351614	Screw, 10–24 x 3/8	24	3399633	Base, Dryer		354975	Screw & Washer (3) (Lid Latch Mounting)
5	696541	Bracket, Motor	25	692400	Nut, Push-In	33	693304	Screw & Washer (2) (Transition Panel To Closure)
6	3390405	Panel, Rear	26	692926	Cove, Transition Panel (Black)	34	697776	Screw, Ground (10–32 x 5/8)
7	343641	Screw, 10–16 x 1/2	27		Panel, Transition	35	3390631	Screw, 10–16 x 3/8
8	3394228	Cover, Terminal Block		692933	White	36	661606	Capacitor, Motor Start (Automatic Washer)
10		Panel, Side (L.H.)		3978591	Biscuit	37	357030	Clamp, Capacitor
	3402293	White	28	692641	Top, Dryer	38	343641	Screw, Capacitor Mounting
	3978589	Biscuit	29		Panel, Side (R.H.)	41	686770	Edge, Protector
14	3399602	Elbow, Upper		3402287	White	44	90296	Clip
15	3394083	Clip, Front Panel (2)		3978590	Biscuit			
16	98234	Clip, Ground	30	693145	Latch, Lid			
17	3399603	Elbow, Lower						
20	8066064	Belt, Drive						

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

For Models: LTG5243DQ4, LTG5243DT4

(Designer White) (Biscuit)

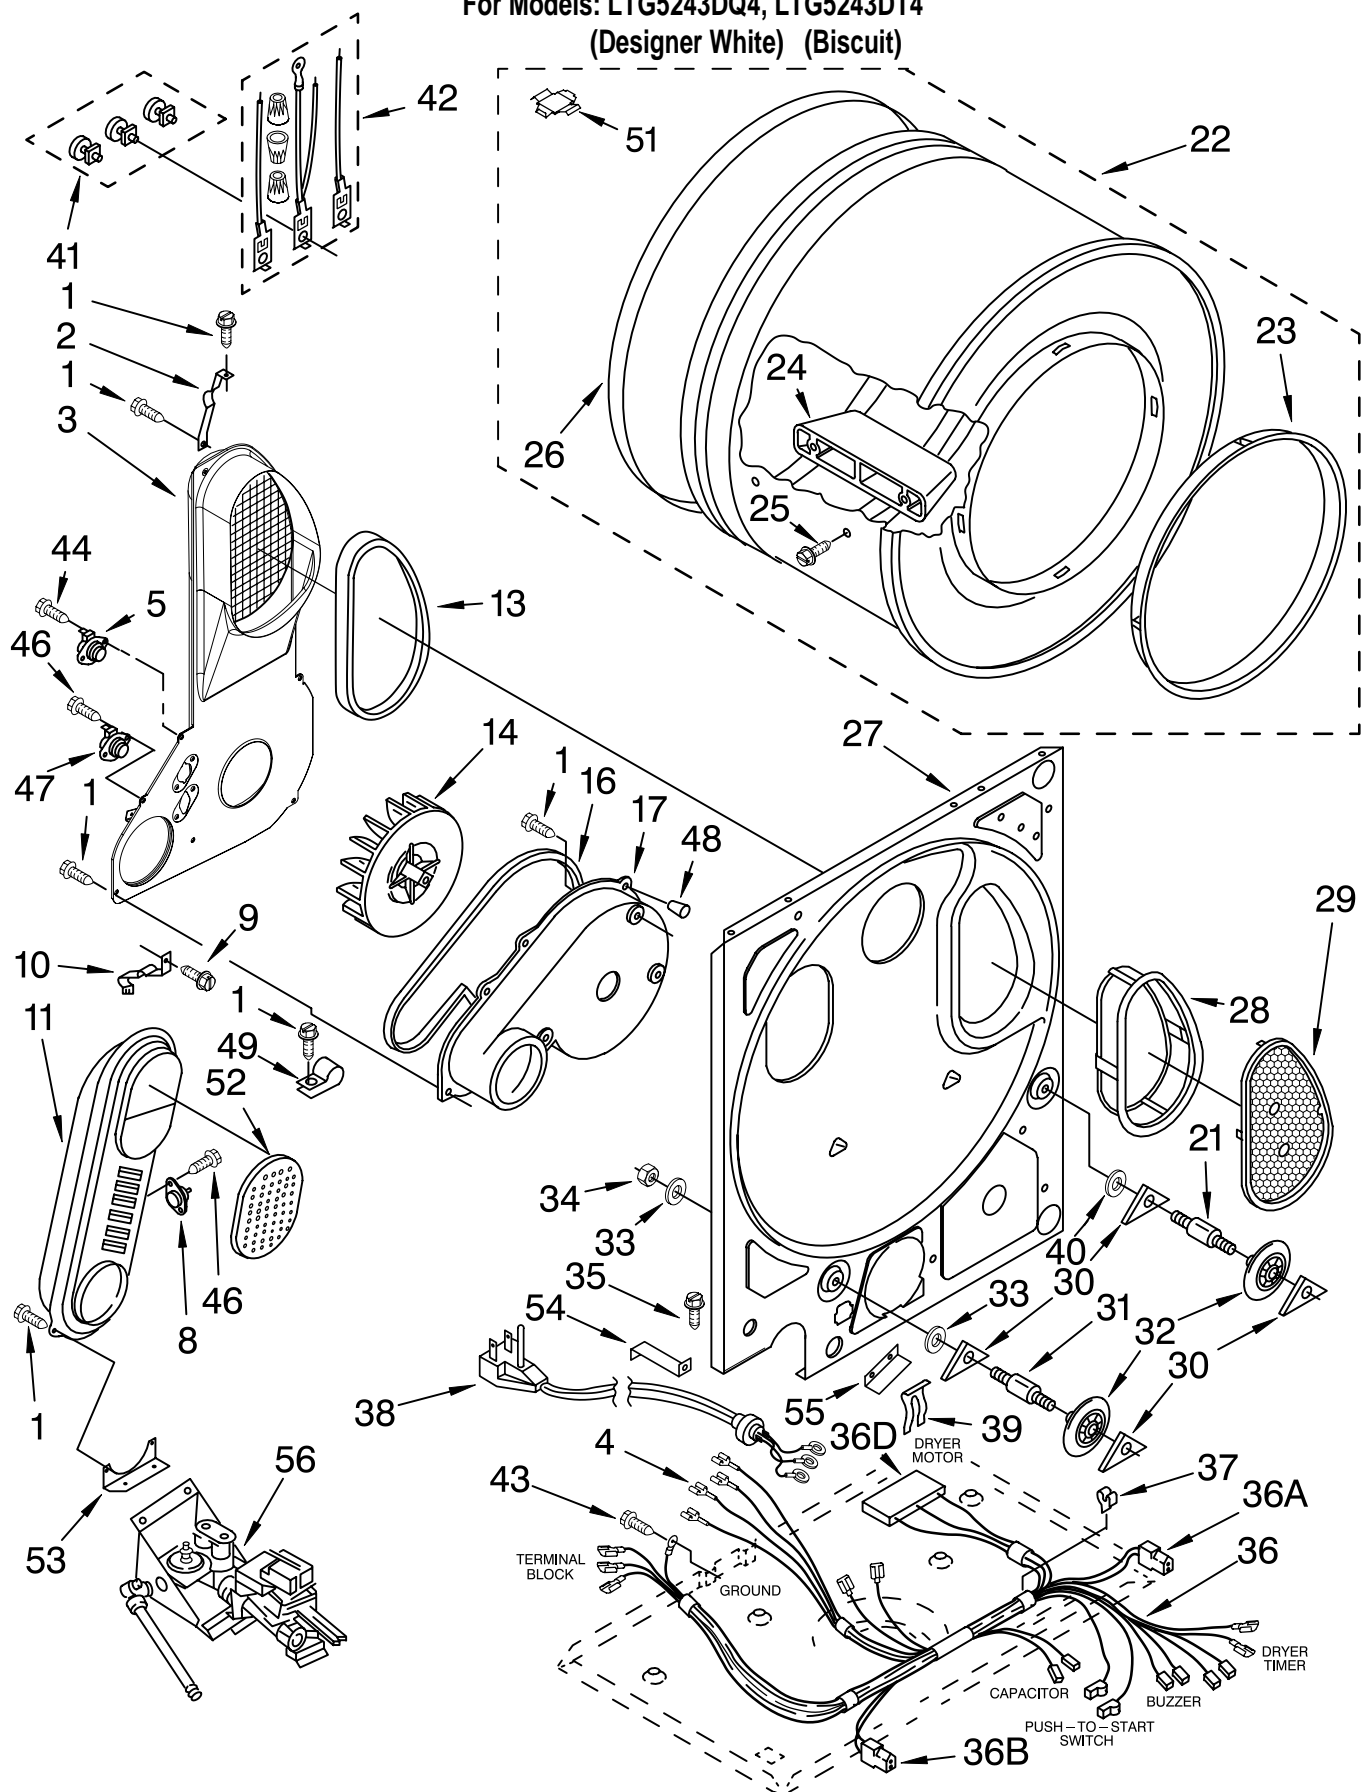

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

DRYER BULKHEAD PARTS

For Models: LTG5243DQ4, LTG5243DT4

(Designer White) (Biscuit)

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1	343641	Screw, 10–16 x 1/2	28	8531964	Lint Screen	38	694018	Cord, Power
2	3395396	Clip, Air Duct To Bulkhead	29	8531967	Cover, Lint Screen Outlet	39	694415	Strain Relief, Power Cord
3	8566187	Air Duct & Cover	30	690997	Tri–Ring (4)	40	3388703	Washer, Support
4	94614	Terminal	31	3399506	Shaft, Drum Roller (L.H.)	41	279393	Screw Kit (For Terminal Block)
5	3398128	Thermostat, Internal Bias	32	3397588	Roller, Support (2)	42	279318	Terminal, Tinned & Brass (3) (Includes Illus. 41)
8	3403140	Thermostat, Heater Box 205°F (96C)	33	348197	Washer, Support (4)	43	697776	Screw, 10–32 x 1/2
9	489463	Screw, 8–18 x 5/8	34	3359452	Nut, 3/8–16 (2)	44	3390647	Screw, 8–18 x 1/2
10	3398161	Clip, Heater Box To Bulkhead	35	3390631	Screw, 10–16 x 3/8	46	90767	Screw, 8–18 X 3/8
11	697269	Heater Box	36	8299829	Harness, Main Dryer Wiring (Includes Illus. 36A, 36B, 36D)	47	3403607	Thermal Limiter 195°F (91C)
13	339956	Seal, Air Duct To Bulkhead	36A	717252	Receptacle, Terminal (2–Way) (Connects With Door Switch Harness)	48	359702	Cap, Screw
14	696426	Wheel, Blower	36B	697780	Receptacle, (Gas Valve)	49	255563	Clip, Strain Relief
16	8066094	Seal, Fan Scroll	36D	3395683	Receptacle, Multi–Terminal (Connects With Dryer Motor)	51	8066086	Drum, Hole Plug
17	696418	Fan Scroll				52	345335	Cover, Manifold
21	3399507	Shaft, Drum Roller (R.H.)	37	693141	Clip, Wiring Harness (3)	53	347455	Support, Heater Box
22	695943	Drum, Dryer				54	3387208	Support, Corner Gas
23	3394508	Ring, Bearing				55	697571	Guard, Sock
24	685207	Baffle, Drum (3)				56	3402856	Burner (Refer to page 19 For Complete Breakdown)
25	97787	Screw, 11–16 x 3/4						
26	345648	Seal, Drum Rear						
27	697540	Bulkhead						


FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

DRYER SUPPORT AND WASHER PARTS

For Models: LTG5243DQ4, LTG5243DT4

(Designer White) (Biscuit)

Illus. No.	Part No.	DESCRIPTION
1	694304	Cover, Channel
2	692647	Support, Dryer (L.H.)
3	343641	Screw, 10-16 x 1/2
4	3400000	Screw, 10-24 x 3/8 (8) (Washer Cabinet To Dryer Supports)
5	692646	Support, Dryer (R.H.)
6	3954108	Harness, Lower (Automatic) (Includes Illus. 6A, 6B & 6C)
6A	696074	Plug, Terminal (12-Way) (Connects With Automatic Console Harness)
6B	62889	Plug, Terminal (3-Way) (Connects With Automatic Lid Switch Harness)
6C	62505	Block, Disconnect (Connects With Automatic Washer Motor)
7	3347812	Clip, Wiring Harness (4)
8	8066080	Hose, Pressure Switch
11	90016	Clip, Pressure Switch Hose (2)
12	693141	Clip, Harness

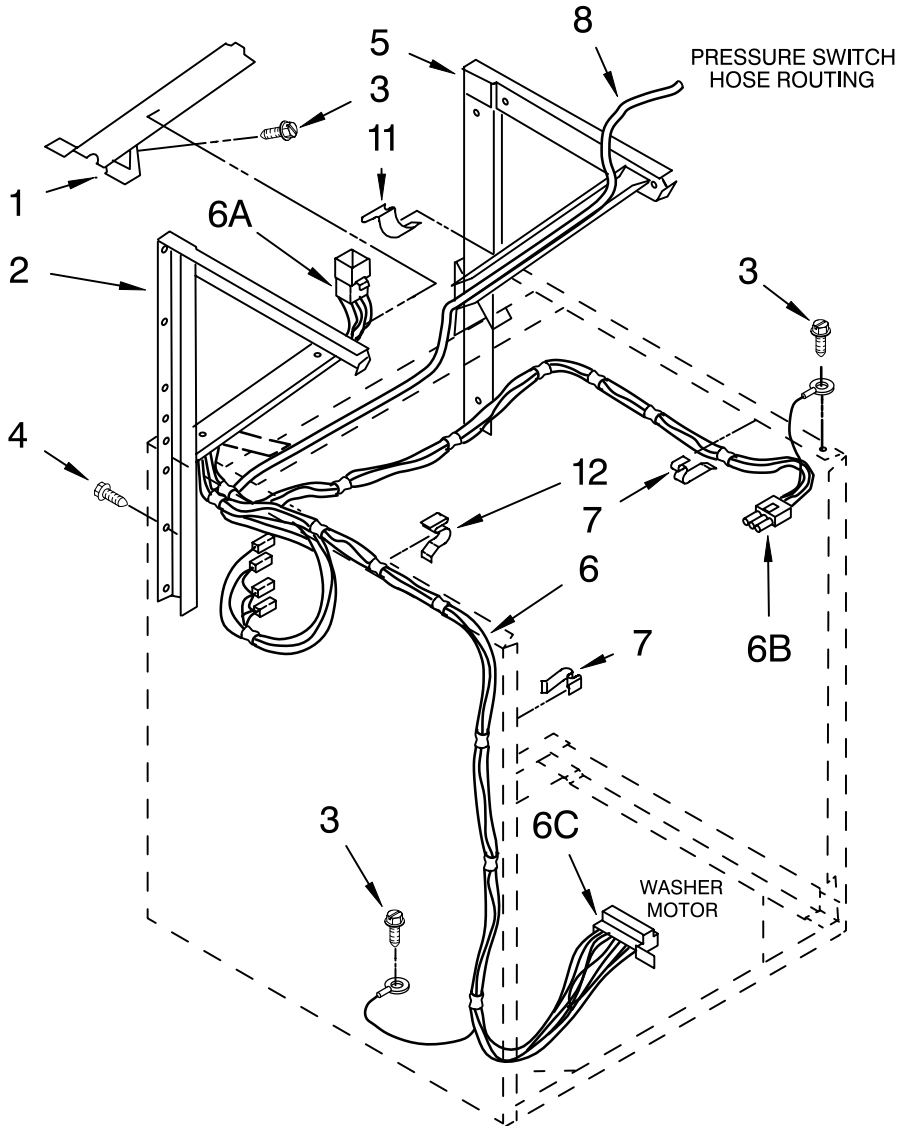


FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

WASHER TOP AND LID PARTS

For Models: LTG5243DQ4, LTG5243DT4

(Designer White) (Biscuit)

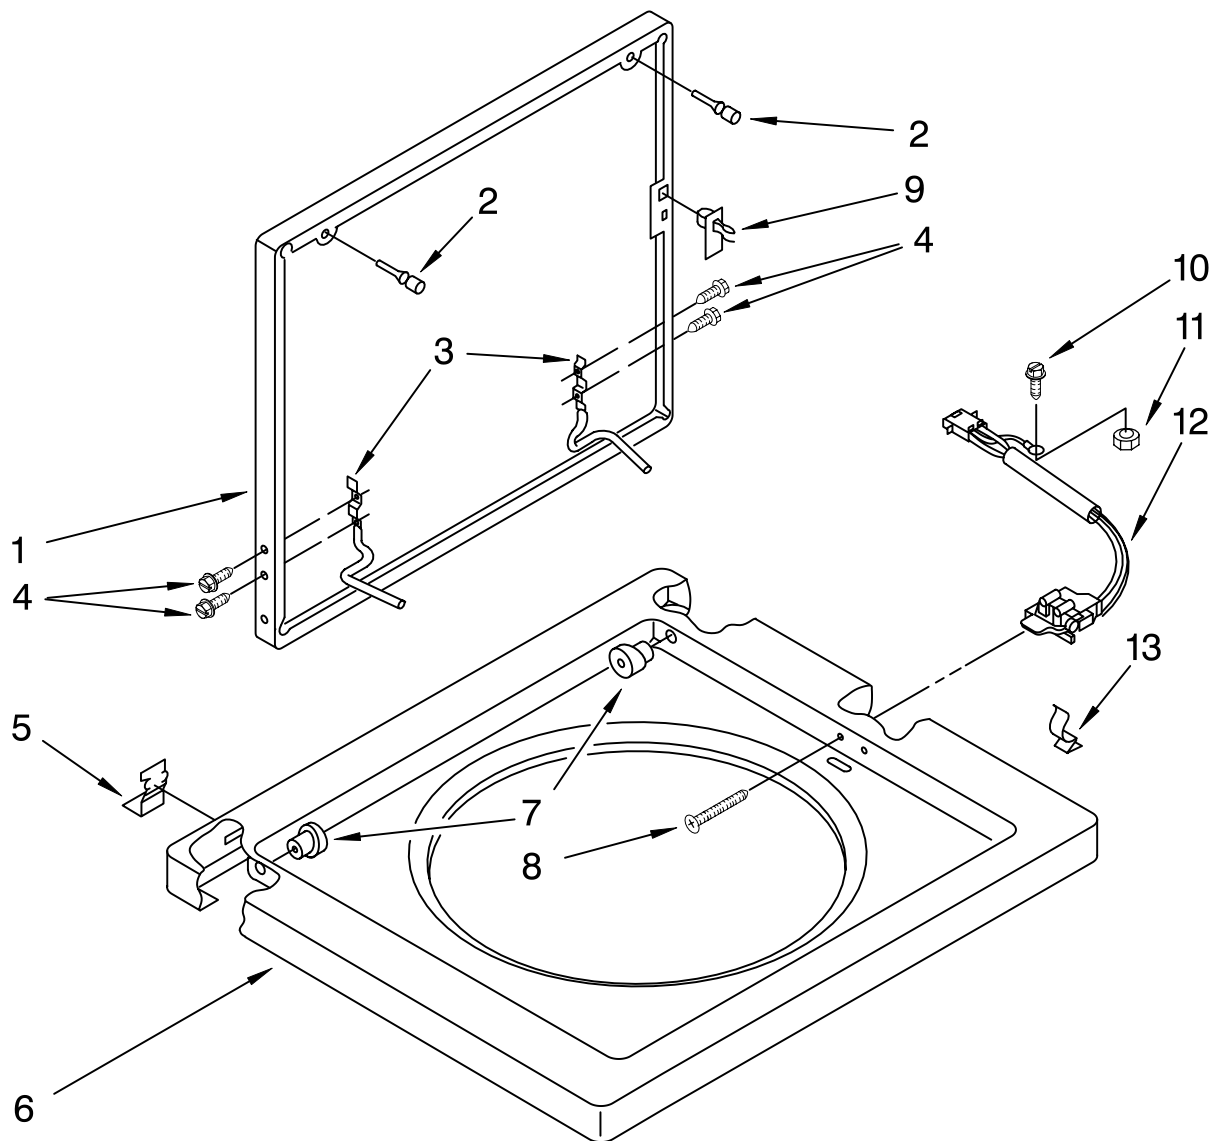


Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1	3398843	Lid	6	384693	Top	9	358684	Strike, Lid
	3398847	White		3978593	White			Switch
2	384475	Biscuit		21258	Biscuit	10	3400030	Screw, 10-24 x 1/2
3	91770	Bumper, Lid (2)	7		Bearing, Lid	11	8533959	Nut, Ground
4	3351355	Hinge, Lid (2)			Hinge (2)			Screw
5	692985	Screw, Lid	8	3356311	Screw & Washer, Lid Switch	12	3355806	Switch, Lid
		Hinge Mounting (4)			Shield (2)	13	90016	Clip, Harness Routing
		Clip, Spring (2)						
		(Top To Cabinet)						

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

WASHER CABINET PARTS

For Models: LTG5243DQ4, LTG5243DT4

(Designer White) (Biscuit)

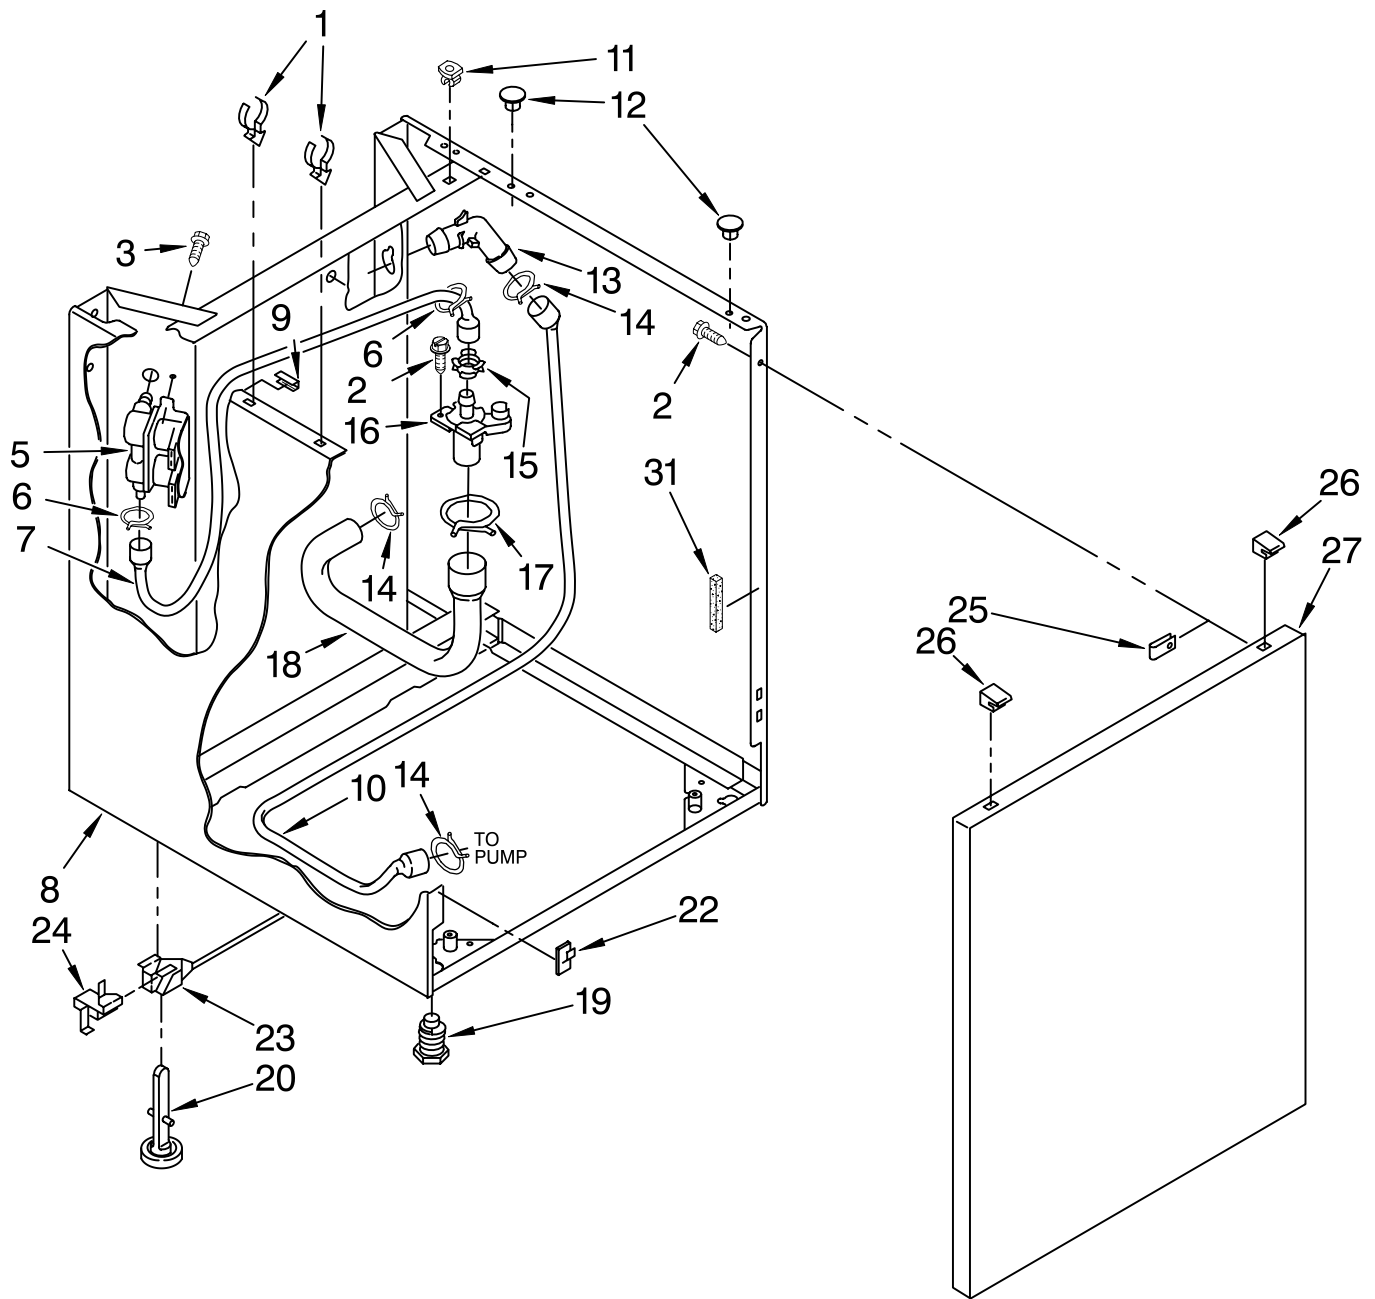

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

WASHER CABINET PARTS

For Models: LTG5243DQ4, LTG5243DT4


(Designer White) (Biscuit)

Illus. No.	Part No.	DESCRIPTION
1	356746	Clip, Condenser
2	343641	Screw, 10–16 x 1/2
3	9740848	Screw, Mixing Valve Mounting
5	3952163	Valve, Water Mixing
6	370451	Clamp, Hose
7	692699	Hose, Water Inlet (Siphon Break To Mixing Valve)
8		Cabinet
	696013	White
	3978594	Biscuit
9	3390046	Protector, Edge
10	696710	Hose, Drain
11	692400	Nut, Push-In (2)
12	660975	Plug, Top To Cabinet
13	8557915	Connector, Hose
14	370445	Clamp, Hose
15	356471	Cap, Siphon Break
16	356363	Siphon Break
17	272861	Clamp, Hose
18	696394	Hose, Water Inlet (Siphon Break To Tub Ring)
19	367594	Foot, Front (2)
20	358594	Foot, Rear (2)
22	3394083	Clip, Front Panel
23	358652	Link, Leveling
24	359364	Clip, Leveling Mechanism (2)
25	98234	Clip, Ground
26	345670	Lock, Top (2)
27		Panel, Front
	692628	White
	3978596	Biscuit
31	3350013	Foam (2)

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

(Designer White) (Biscuit)

Illus. No.	Part No.	DESCRIPTION
10	3357334	Screw, (Gearcase To Tub Support)
11	62611	Plate, Motor Mount To Gearcase
13	3364003	Coupling, Motor & Isolating
14	661600	Motor, Main Drive
15	3355454	Clip (Anti-Rattle)
16	3946532	Plate, Motor
18	3363394	Pump, Complete
19	8546127	Retainer, Pump
20	62850	Switch, Main Drive Motor
21	62691	Grommet, Motor (4)
22	3349637	Retainer, Motor (2)
24	3387485	Screw, 10-16 x 5/8

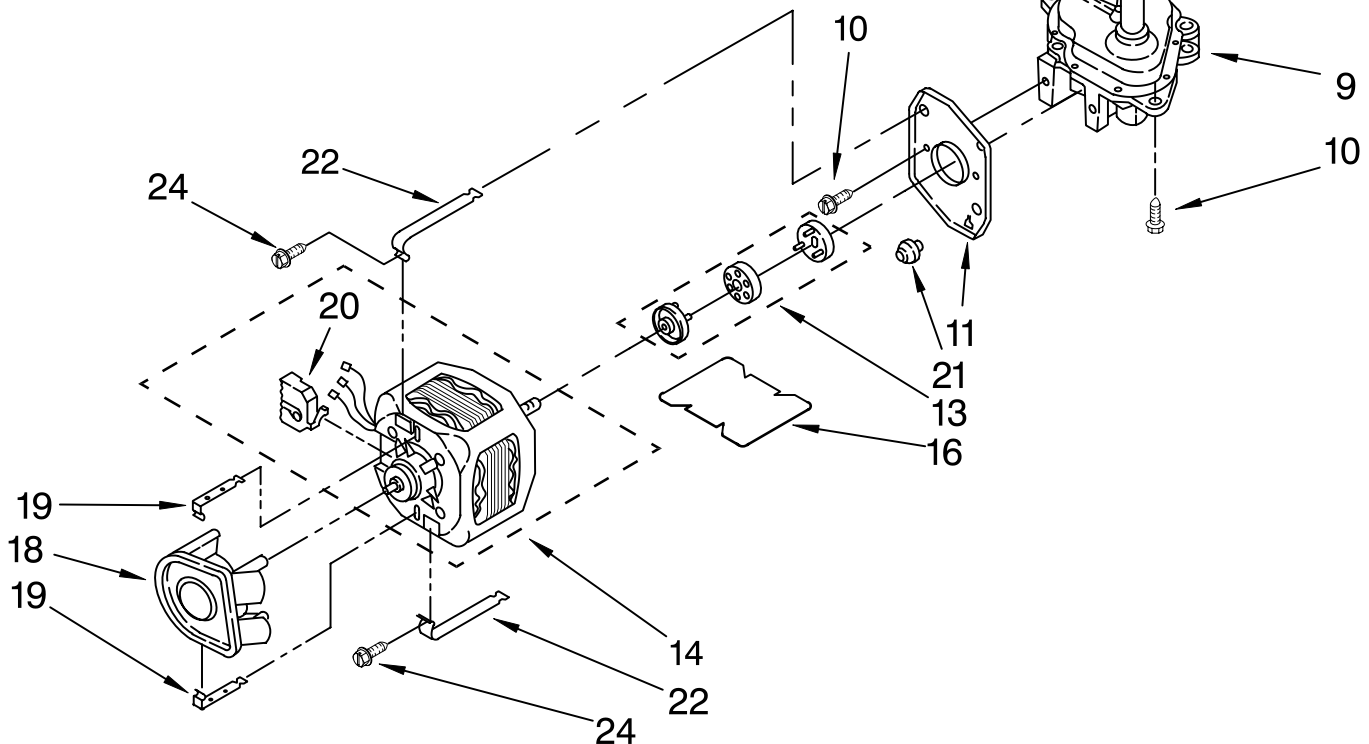


11

MACHINE BASE PARTS

For Models: LTG5243DQ4, LTG5243DT4

(Designer White) (Biscuit)

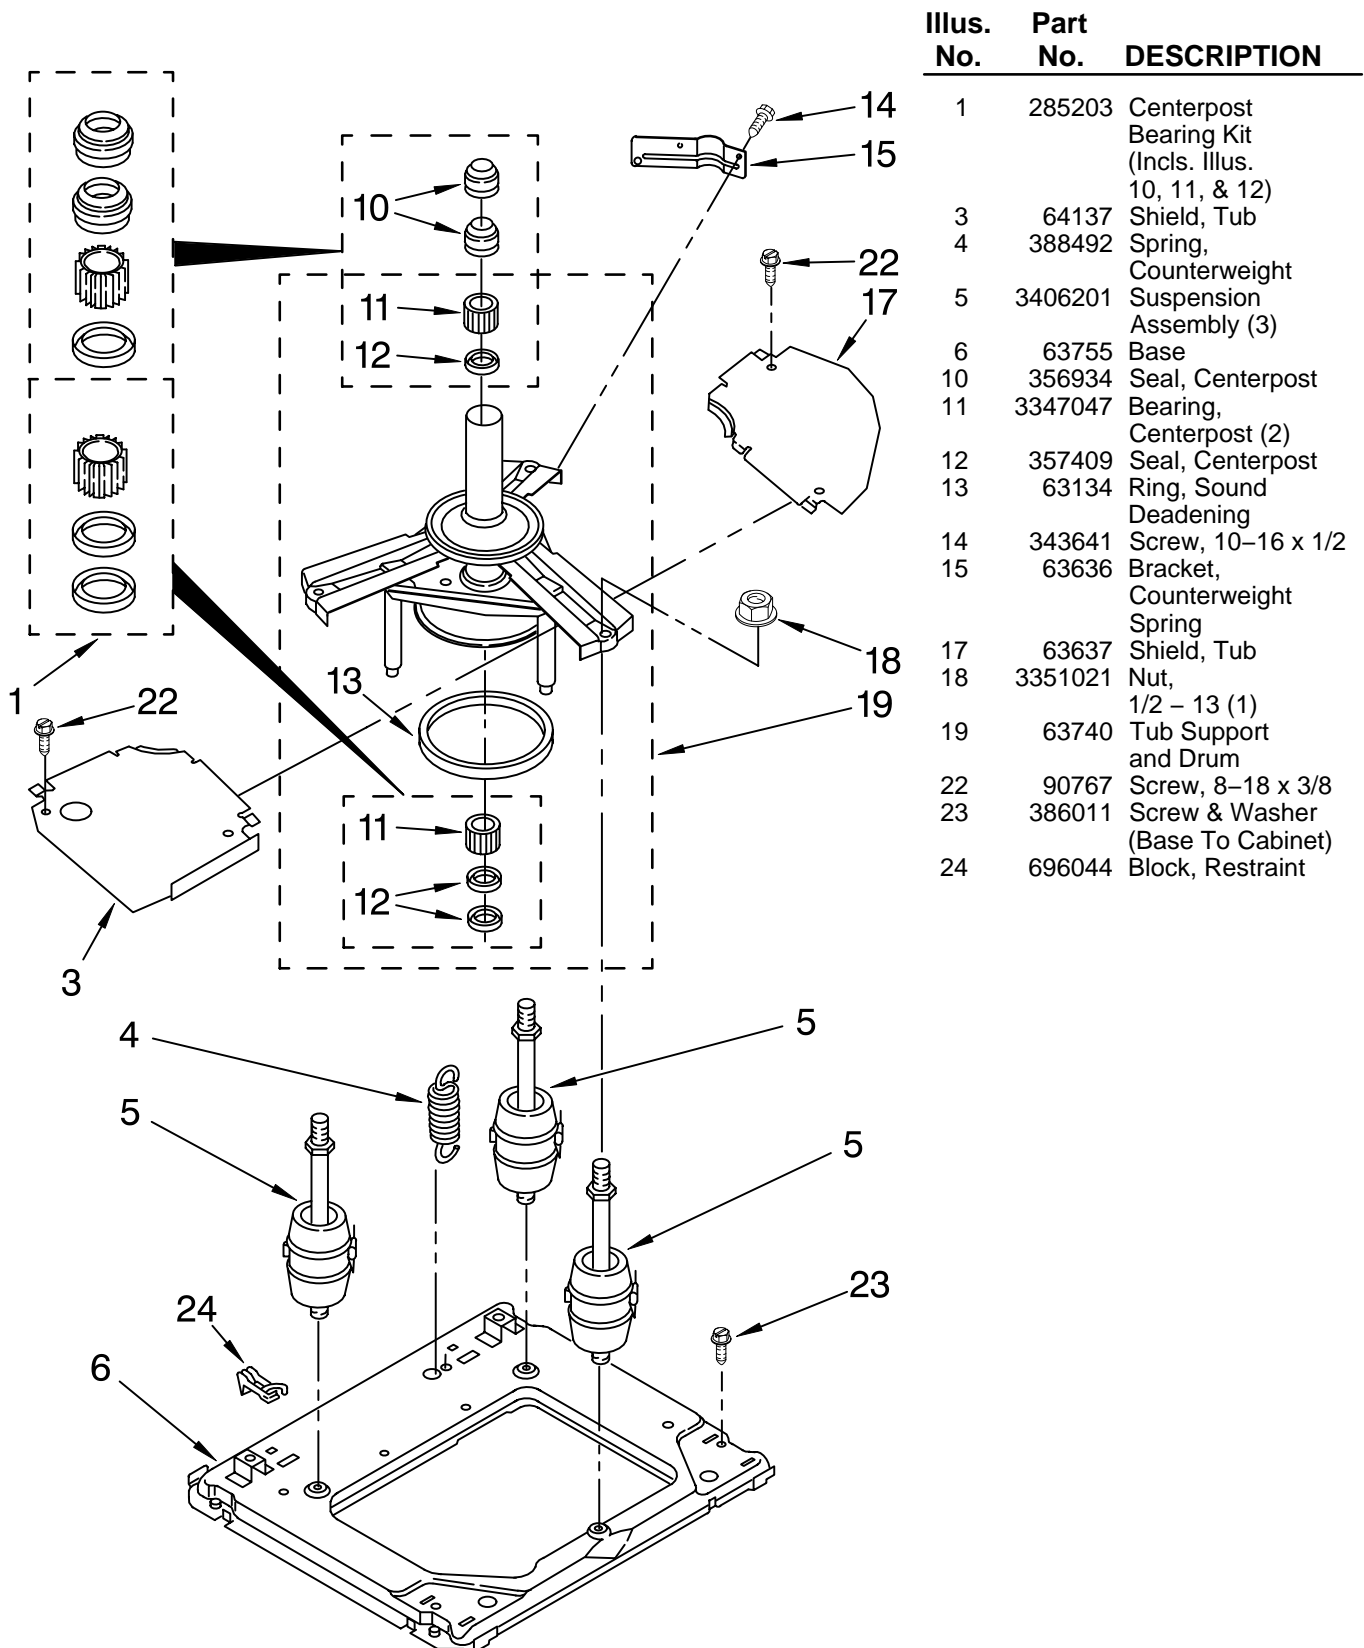


FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

TUB AND BASKET PARTS

For Models: LTG5243DQ4, LTG5243DT4

(Designer White) (Biscuit)

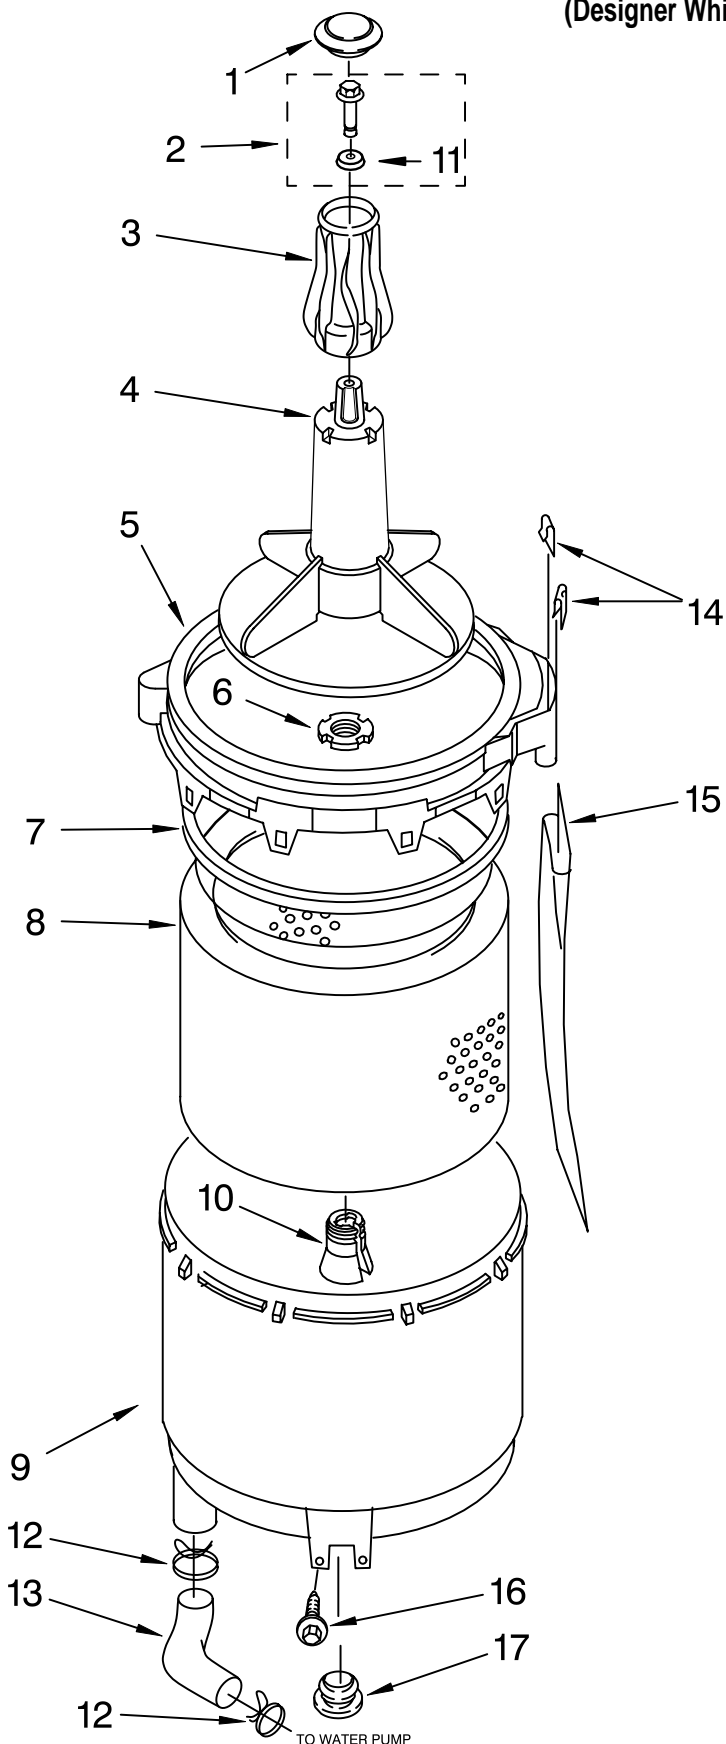


Illus. No.	Part No.	DESCRIPTION
1	3355758	Cap, Agitator
2	358237	Screw & Washer (5/16-24 x 1)
3	63840	Filter, Agitator
4	3349098	Agitator
5	64175	Tub Ring & Gasket (Includes Illus. 7, 14 & 15)
6	21366	Nut, Spanner
7	3359587	Gasket, Tub Ring
8	3351985	Basket
9	8066082	Tub
10	389140	Block, Basket Drive
11	3949550	Washer
12	371502	Clamp, Hose
13	386929	Hose, Tub To Pump
14	352155	Clip, Retaining
15	356398	Tube, Drain Off
16	357640	Screw & Washer (Tub Mounting)
17	383727	Gasket, Centerpost

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

WATER SYSTEM PARTS

For Models: LTG5243DQ4, LTG5243DT4
(Designer White) (Biscuit)

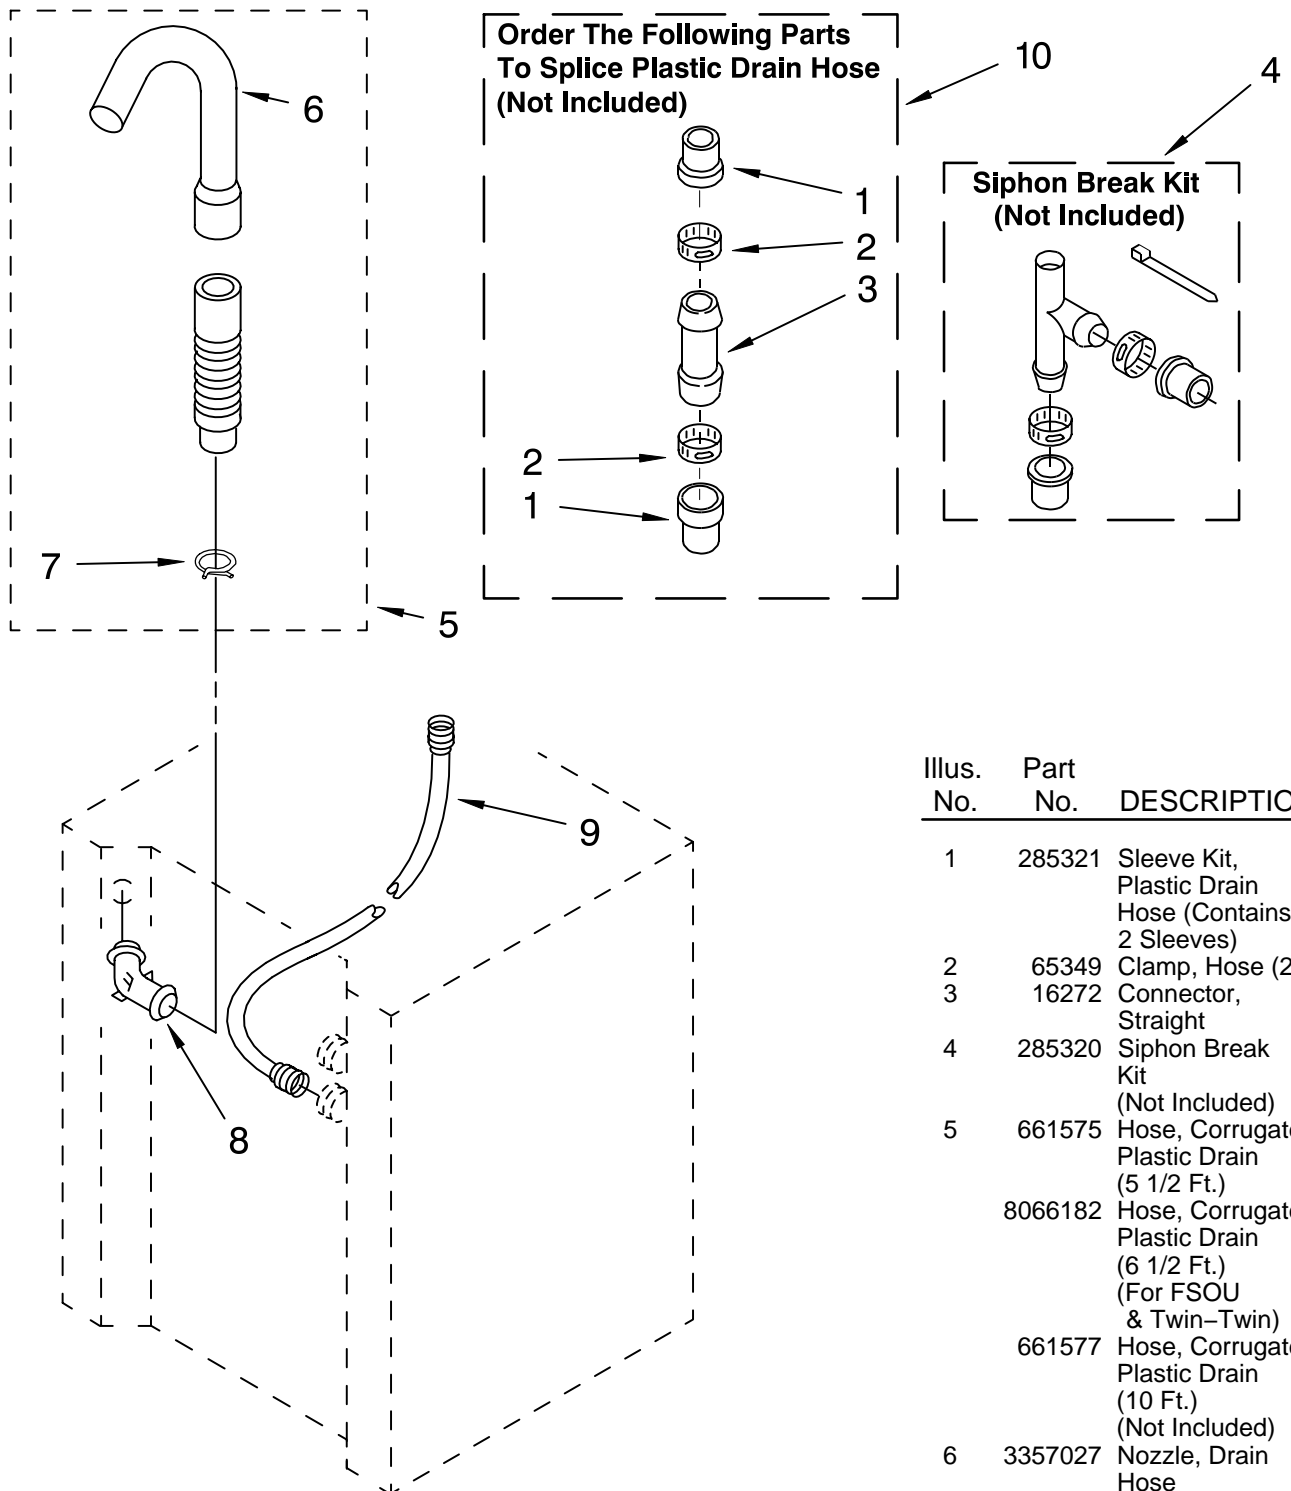

WS-900C


Illus. No.	Part No.	DESCRIPTION
1	285321	Sleeve Kit, Plastic Drain Hose (Contains 2 Sleeves)
2	65349	Clamp, Hose (2)
3	16272	Connector, Straight
4	285320	Siphon Break Kit (Not Included)
5	661575	Hose, Corrugated Plastic Drain (5 1/2 Ft.)
	8066182	Hose, Corrugated Plastic Drain (6 1/2 Ft.) (For FSOU & Twin-Twin)
	661577	Hose, Corrugated Plastic Drain (10 Ft.) (Not Included)
6	3357027	Nozzle, Drain Hose
7	3357331	Clamp, Hose
8	356739	Connector, Hose
9	3354858	Hose, Inlet (2)
10	285442	Connector Kit, Plastic Drain Hose

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

GEARCASE PARTS

For Models: LTG5243DQ4, LTG5243DT4

(Designer White) (Biscuit)

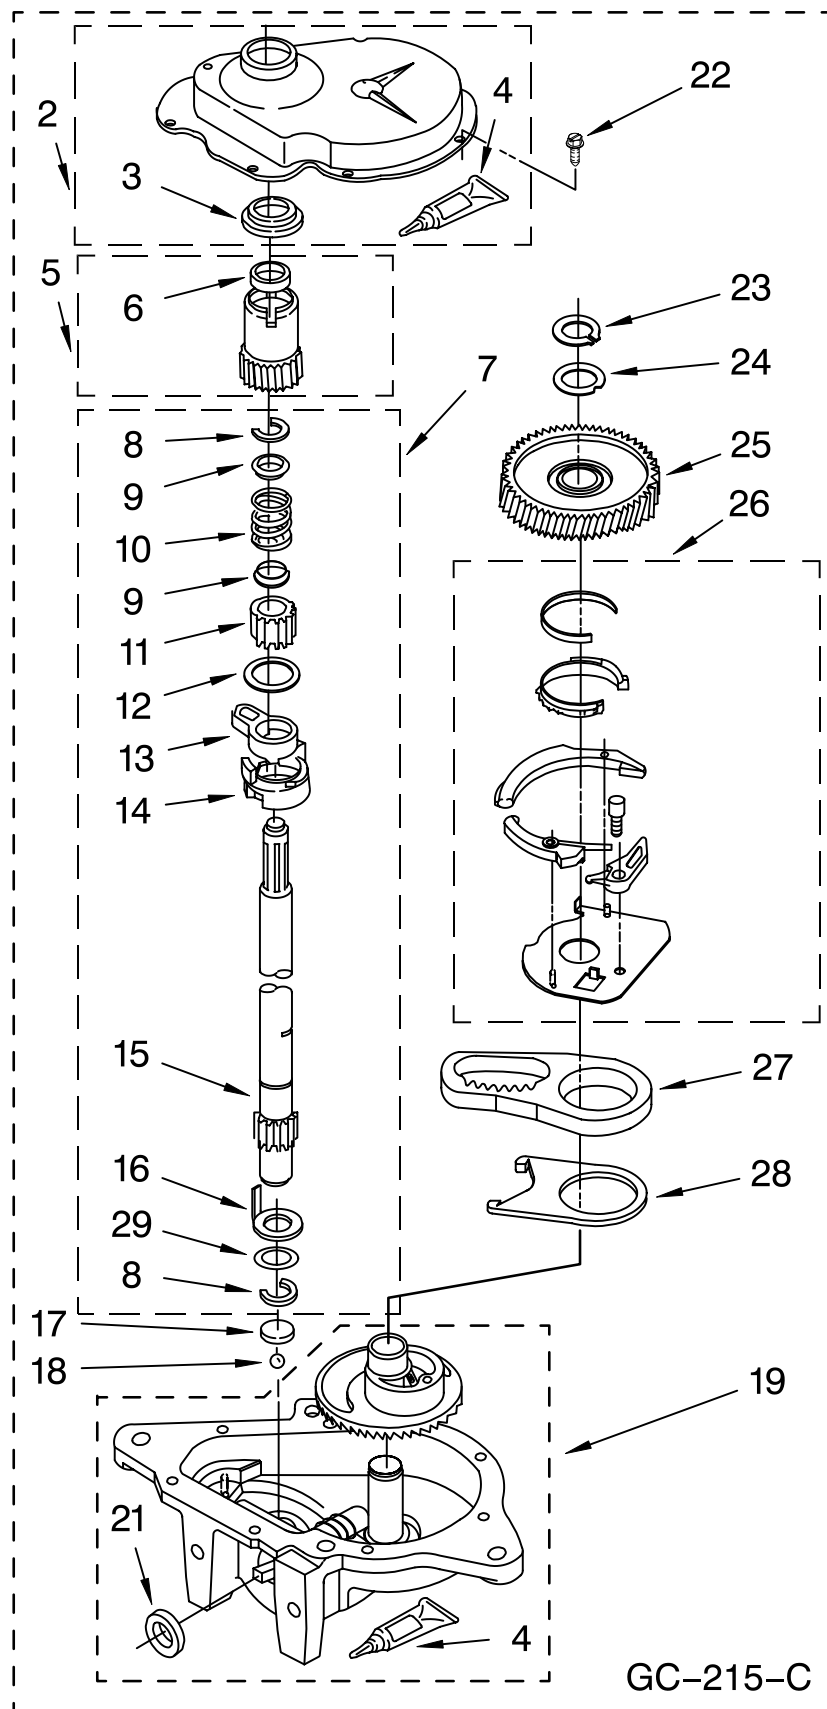

Illus. No.	Part No.	DESCRIPTION
1	3360630	Gearcase (Complete)
2	285202	Cover, Gearcase
3	3349985	Seal, Gearcase Cover
4	285195	Sealer, Gasket (.20 Fl. Oz.) (6 ml)
5	63320	Pinion, Spin (Includes Illus. 25)
6	356427	Seal, Spin Pinion
7	389387	Shaft, Agitator (Complete)
8	90369	Ring, Retaining (2)
9	62677	Retainer, Spring
10	62676	Spring, Agitate
11	63273	Gear, Agitate (Includes 15 and 29)
12	62619	Washer, Agitate Gear
13	62580	Cam Follower (Includes 14)
14	62581	Cam, Agitate (Includes 13)
15	285509	Shaft, Agitator (Includes 11 and 29)
16	62618	Washer, Cam Thrust
17	16018	Bearing, Thrust
18	85529	Ball, Bearing
19	389230	Bottom and Pinion, Gearcase
21	285352	Seal, Thrust Plug
22	3351614	Screw, Gearcase Cover, Mounting (8) (10-24 x 3/8)
23	3362552	Ring, Retaining
24	285735	Washer Kit, Thrust
25	62570	Gear, Spin
26	388253	Neutral Assembly
27	3349296	Rack, Connecting Actuator, Shift
28	62621	Washer, Intermediate
29	388815	Washer, Intermediate


GC-215-C

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

BRAKE AND DRIVE TUBE PARTS

For Models: LTG5243DQ4, LTG5243DT4

(Designer White) (Biscuit)

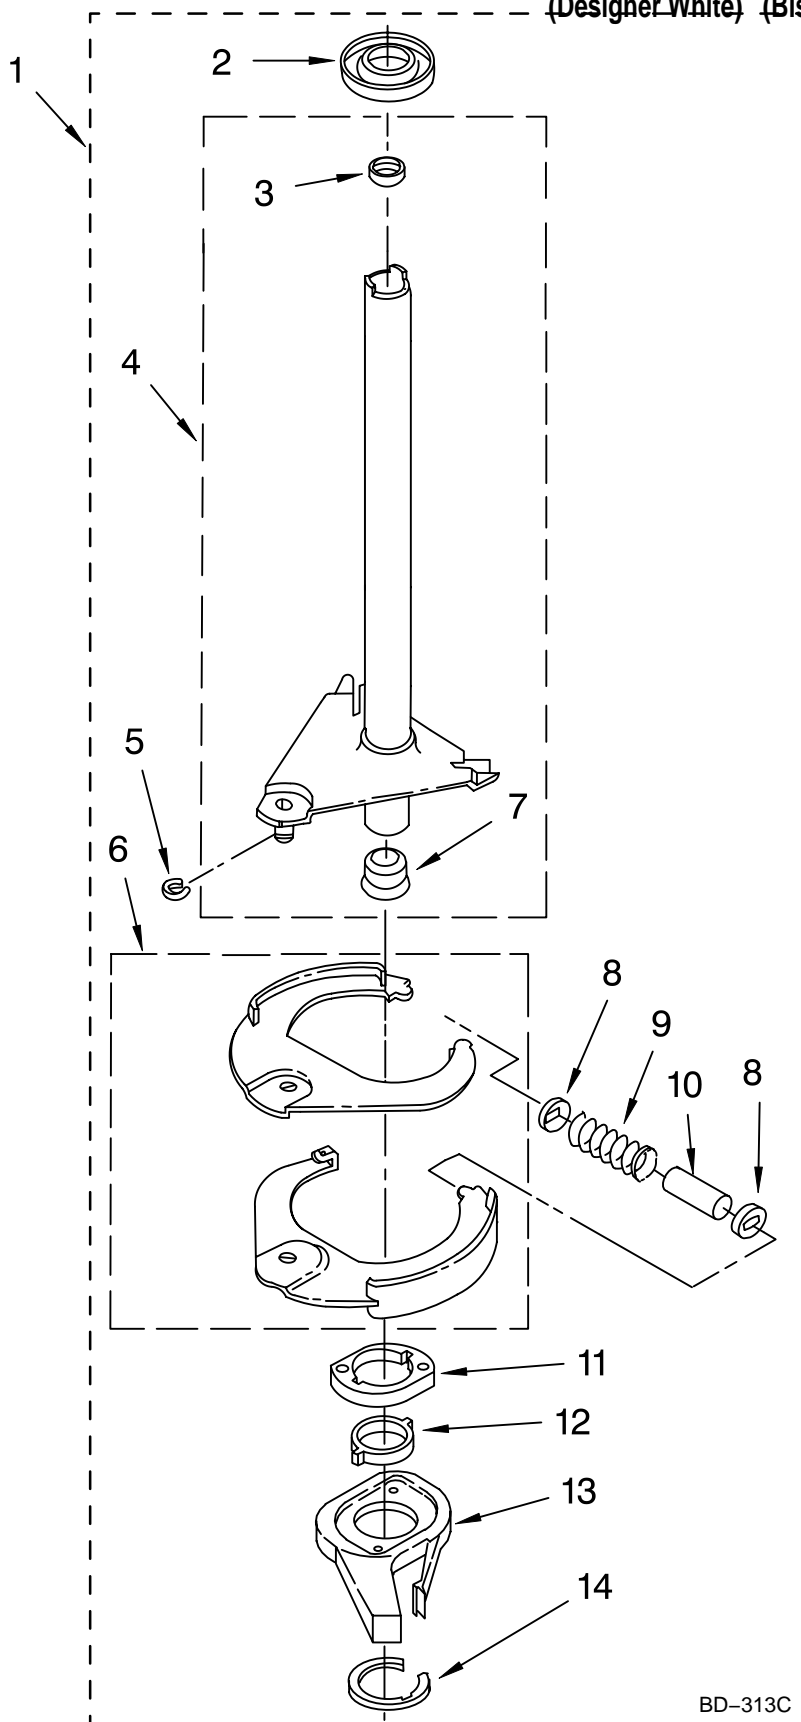

Illus. No.	Part No.	DESCRIPTION
1	387948	Brake And Drive Tube (Complete)
2	62658	Ring, Thrust
3	356427	Seal, Drive Tube
4	64027	Tube, Basket Drive (Includes Illus. 3, 4, 5 & 9)
5	64035	Ring, Retaining
6	64232	Shoe, Brake (2)
7	62703	"T" Bearing, Spin Tube
8	3353956	Cap, Brake Spring (2)
9	63748	Spring, Brake
10	3355360	Sleeve, Brake Spring
11	661516	Cam, Brake Release
12	63022	Sleeve, Cam
13	64194	Driver, Brake Cam
14	90368	Ring, Retaining


FOLLOWING PARTS NOT ILLUSTRATED

285208 Lubricant
(Use Only In Brake Shoe Assembly On Roller & Pin)

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

PRODUCT ACCESSORY PARTS

For Models: LTG5243DQ4, LTG5243DT4
(Designer White) (Biscuit)

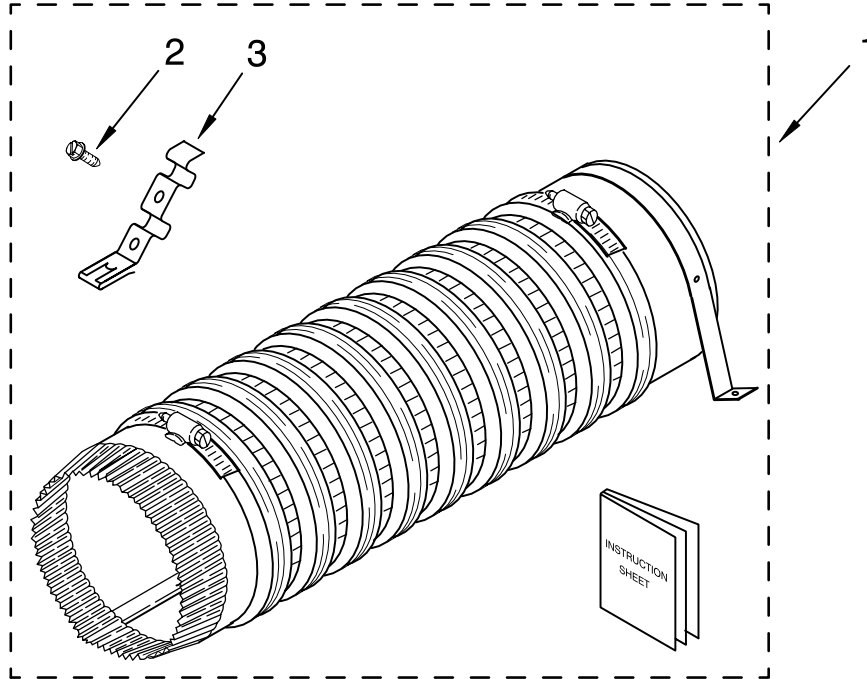


Illus. No.	Part No.	DESCRIPTION
1	279823	Side Exhaust Extension Kit (Complete)
2	488729	Screw
3	3395536	Clip

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

MISCELLANEOUS PARTS

For Models: LTG5243DQ4, LTG5243DT4

(Designer White) (Biscuit)

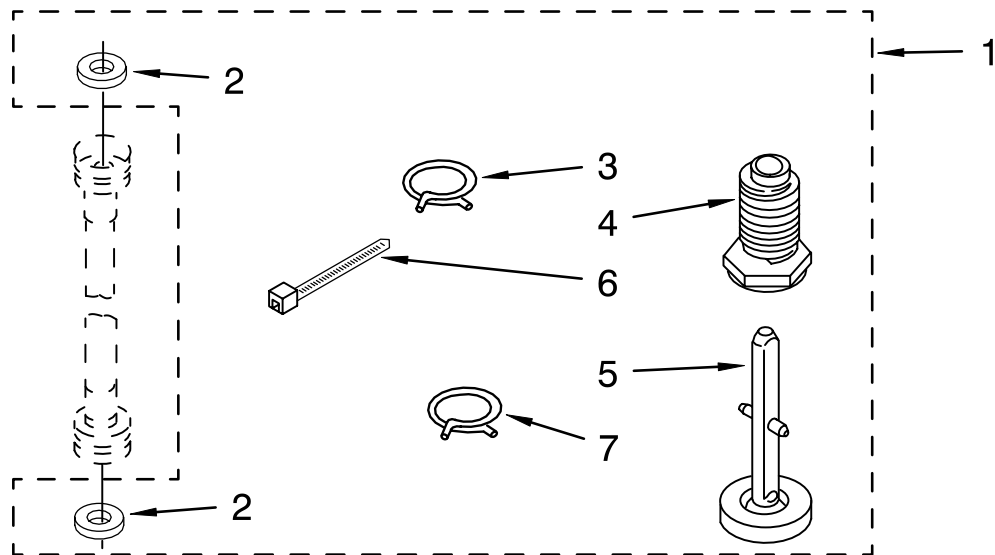

Illus. No.	Part No.	DESCRIPTION
1	3359934	Miscellaneous Parts Bag
2	16123	Washer, Inlet Hose (4)
3	370445	Clamp, Hose
4	367594	Foot, Front (2)
5	358594	Foot, Rear (2)
6	3347869	Tie, Cable
7	3357331	Clamp, Hose (Upper Drain)


FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

3402856 BURNER ASSEMBLY

For Models: LTG5243DQ4, LTG5243DT4

(Designer White) (Biscuit)

USE WITH TYPE 1 – NATURAL, TYPE 2 – MIXED, TYPE 3 – MANUFACTURED
AND TYPE 4 – LIQUEFIED PROPANE AND BUTANE GASES

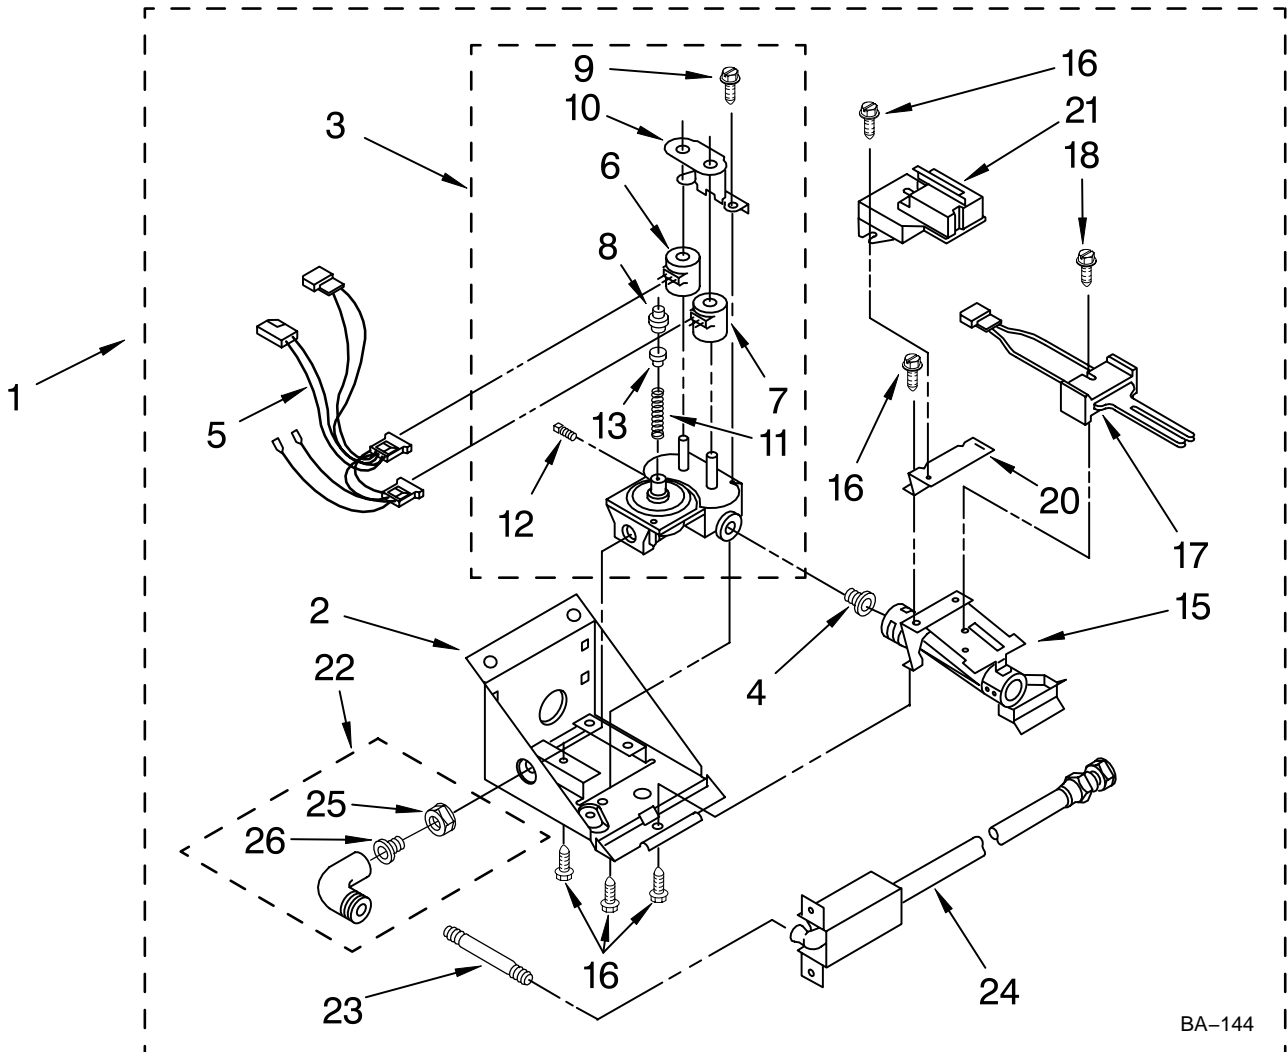

BA-144

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1	3402856	Burner Assembly 60 Hz.	9	694421	Screw, 8-32	22	3406051	Elbow Union Assembly
2	697408	Base, Burner	10	694538	Bracket, Shunt	23	3388638	Nipple, Short
3	3401777	Valve, 60 Hz.	11	694422	Spring, Regulator	24	3391118	Supply Line (Gas)
4		Orifice	12	239822	Pipe, Plug	25	233076	Nut
	234822	Natural Gas	13	694423	Screw	26	3393767	Pipe
	347743	L.P. Gas	15	3392268	Burner	Following Parts Not Illustrated		
5	3401849	Harness	16	3387057	Screw, 8-18 X 3/8			
6	694539	Coil, 60 Hz. (Split)	17	686590	Ignitor			
7	694540	Coil, 60 Hz.	18	3393909	Screw and Washer 8-32 x 1			
8	694424	Leak Limiter	20	697409	Bracket, Sensor			
			21	338906	Sensor, Radiant			
						49573		Conversion Kit (Type 1, 2 & 3) to Type (4) L.P.G.

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OPTIONAL PARTS (NOT INCLUDED)

For Models: LTG5243DQ4, LTG5243DT4

(Designer White) (Biscuit)

Illus. No.	Part No.	DESCRIPTION
<u>PAINT, TOUCH-UP (1/2oz.)</u>		
	72017	White
	4392899	Biscuit
<u>PAINT, PRESSURIZED SPRAY (12 oz.)</u>		
	350938	Primer, Gray
	350930	White
	4392901	Biscuit

Illus. No.	Part No.	DESCRIPTION
<u>PAINT, BULK (1 qt.)</u>		
	799344	White (Uncut)
	4392900	Biscuit (Uncut)
<u>ACCESSORY PARTS</u>		
		Plug, Dryer
		Side Panel
	692790	White
	3977784	Biscuit
<u>OIL</u>		
	350572	Oil, Gearcase (16 Oz.)

Illus. No.	Part No.	DESCRIPTION
<u>LUBRICANT</u>		
	285208	Lubricant (Use Only in Brake Shoe Assembly On Roller and Pin)
<u>SEALER</u>		
	285195	Sealer, Gasket (.20 Fl. Oz.) (6 ml)

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST